

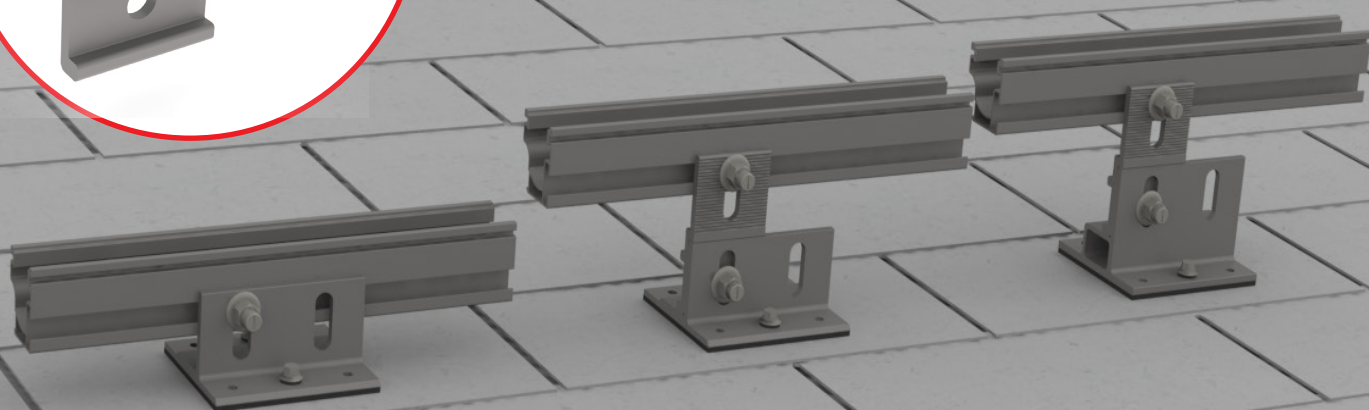


# Splice Foot Lift Kit

## QUICK GUIDE

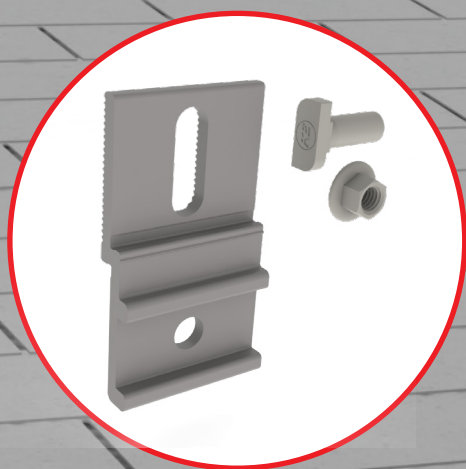


# Components

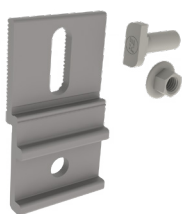



| Part Number | Description           |
|-------------|-----------------------|
| 4000265     | Splice Foot Lift, Kit |

# Tools Overview

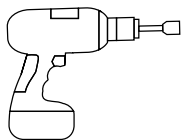


13 mm dep socket  
▶ Torque 11.8 ft-lbs  
[For t-bolt to rail  
attachment]


# Assembly Onto Roof

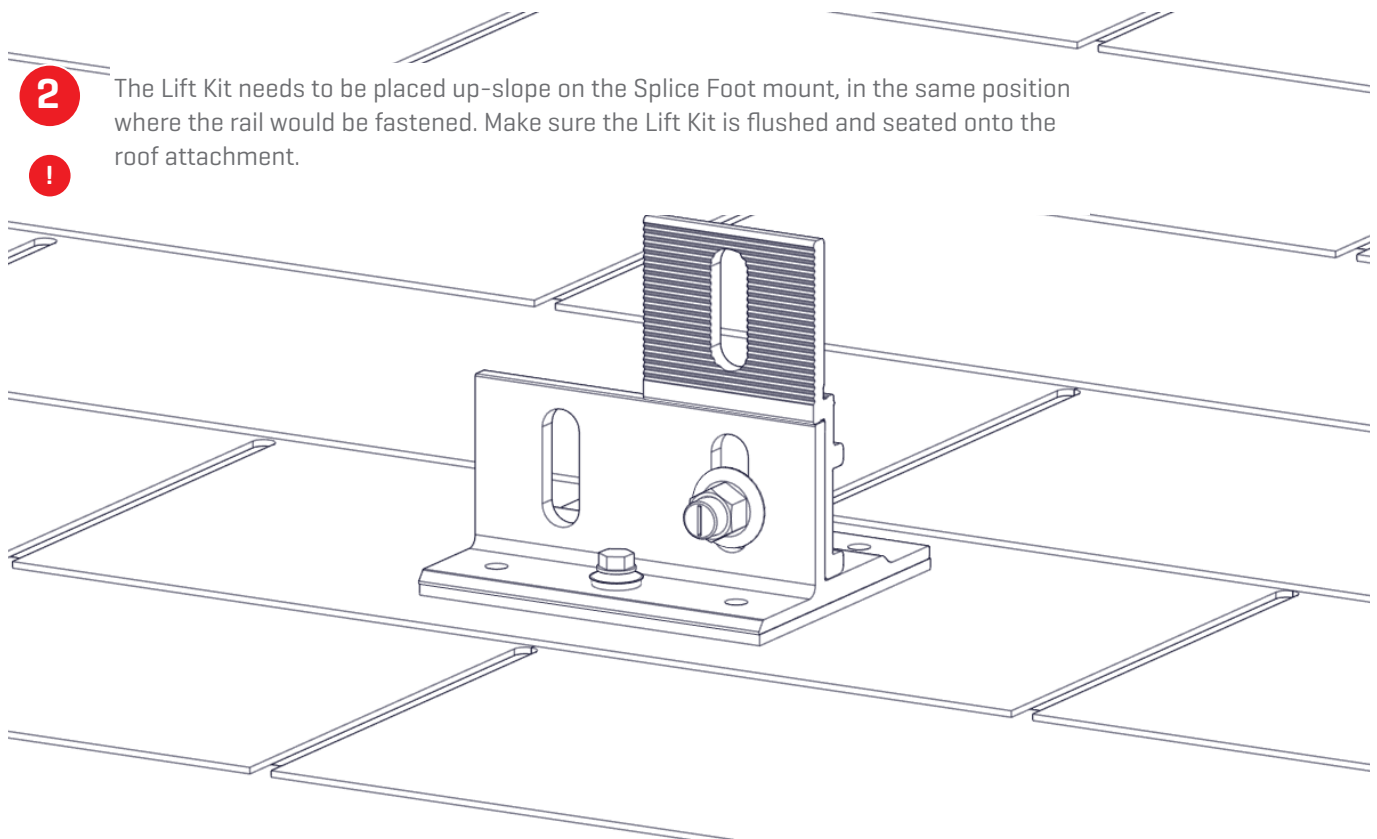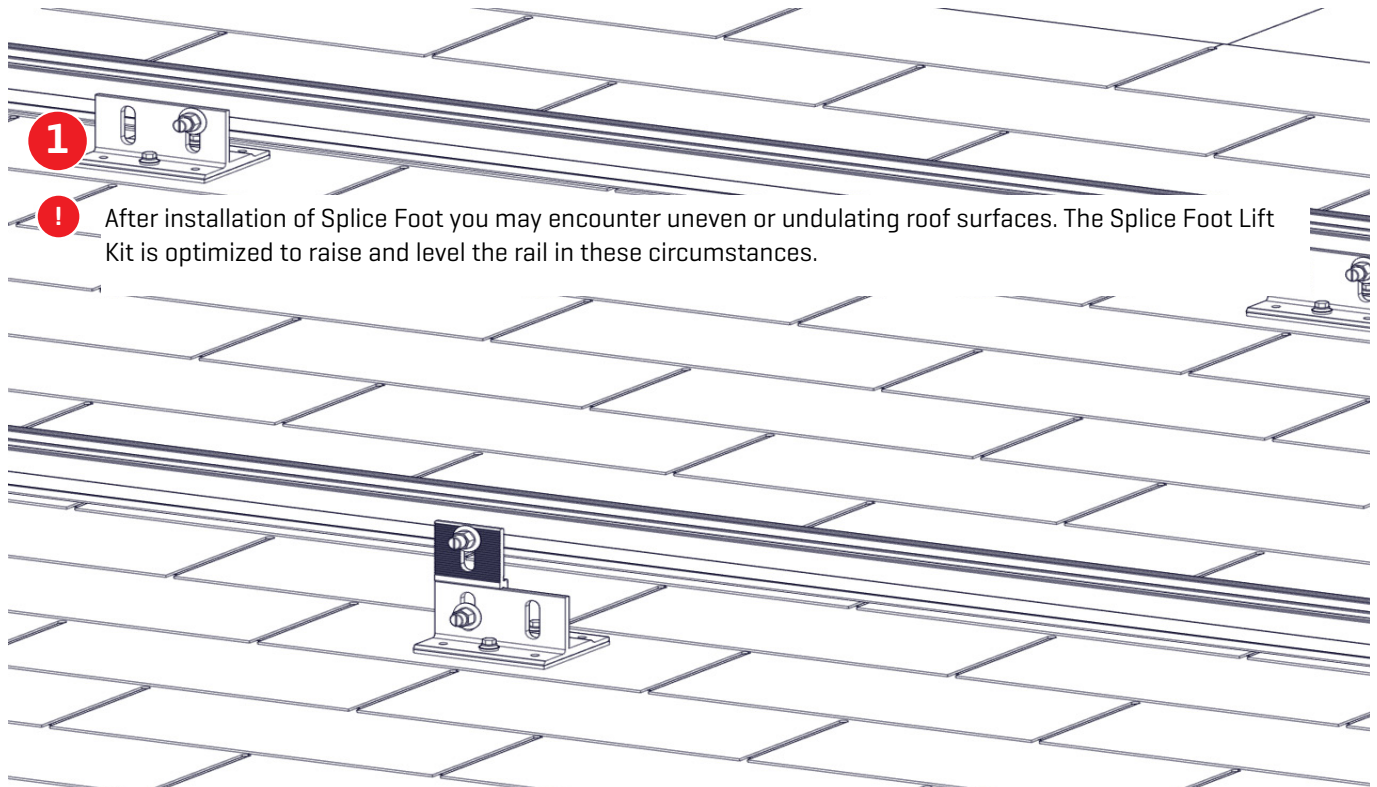

- 3** 1/4 turn the T-bolt to ensure it is at 90 degrees. Tighten the serrated flange nut. [View is from backside of the mount from the ridge side of the roof]

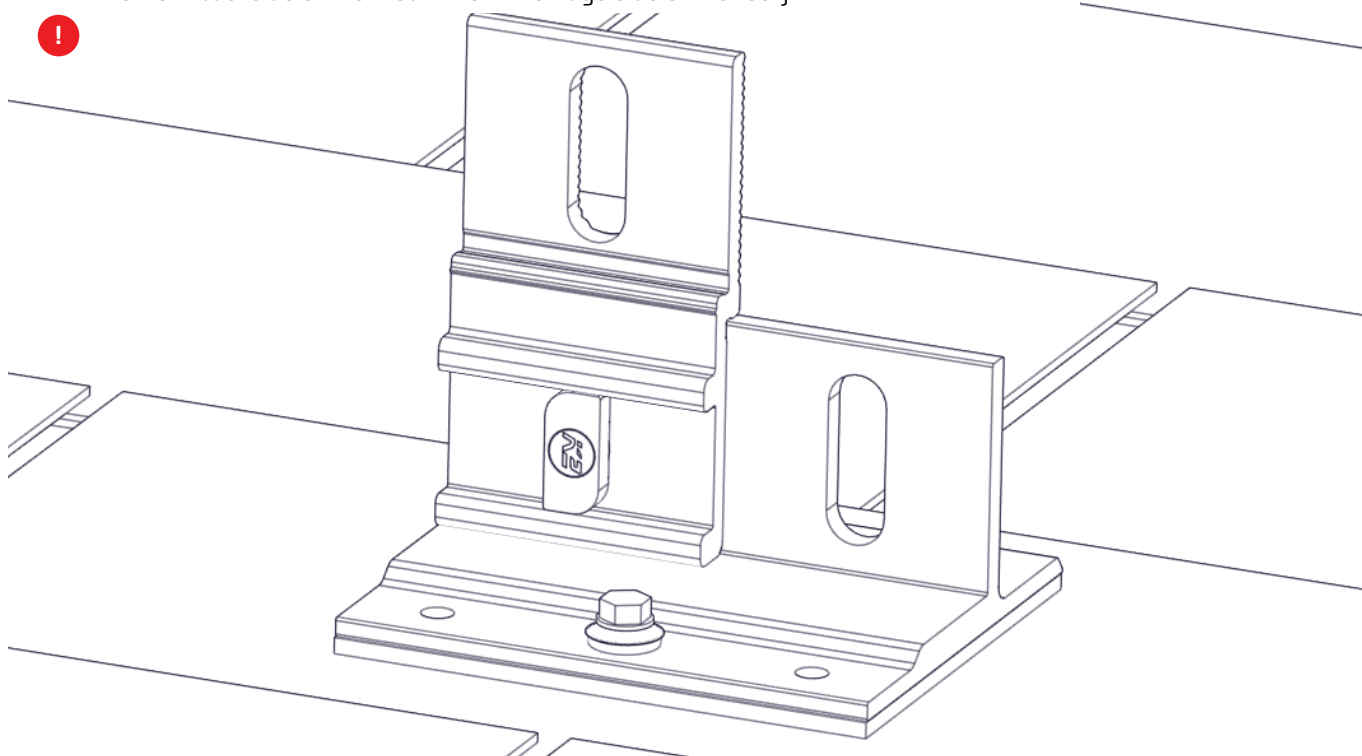


- 4** Mount the rail onto the Lift Kit and adjust for optimal height. Fasten and check for the same positioning of the T-bolt.

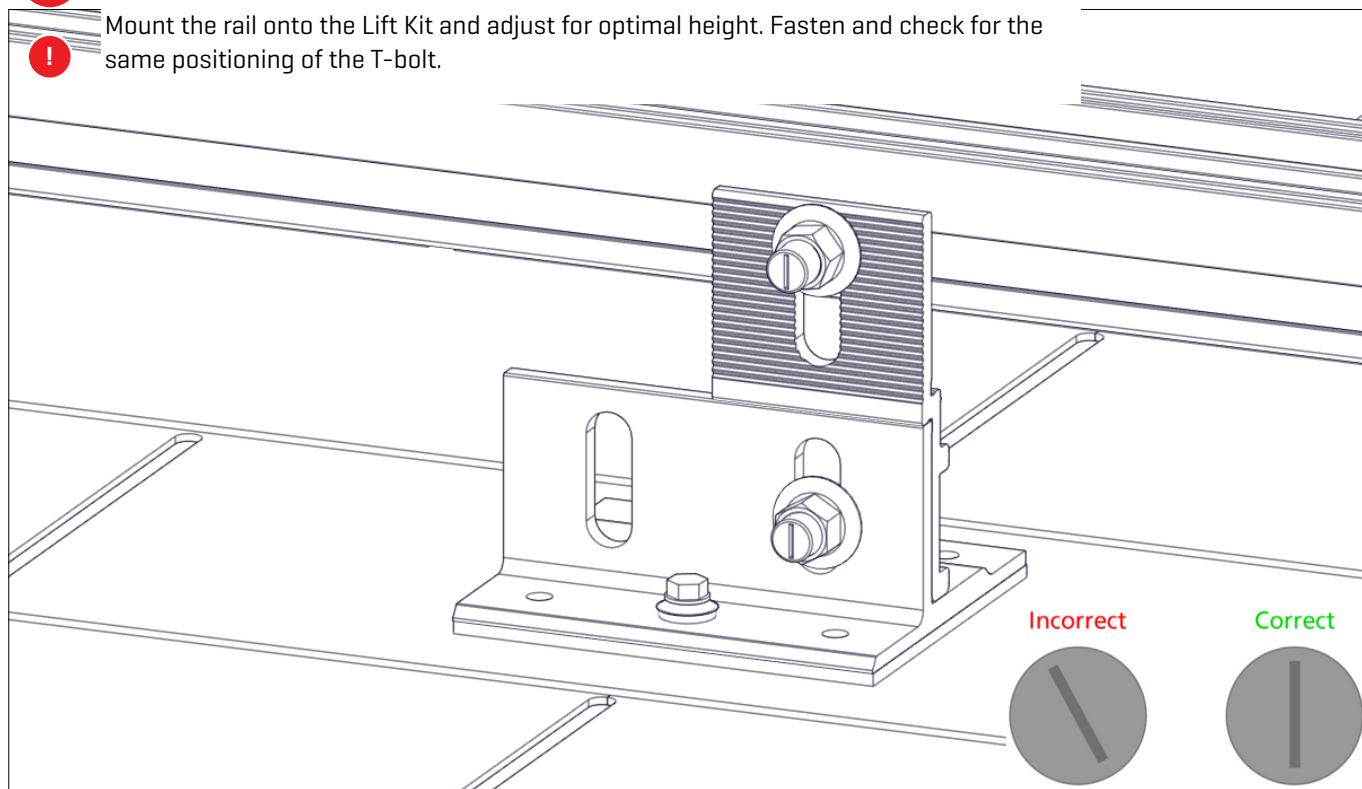

5

! Fasten T-bolt and serrated flange nut to 25.8 ft-lbs [35Nm].

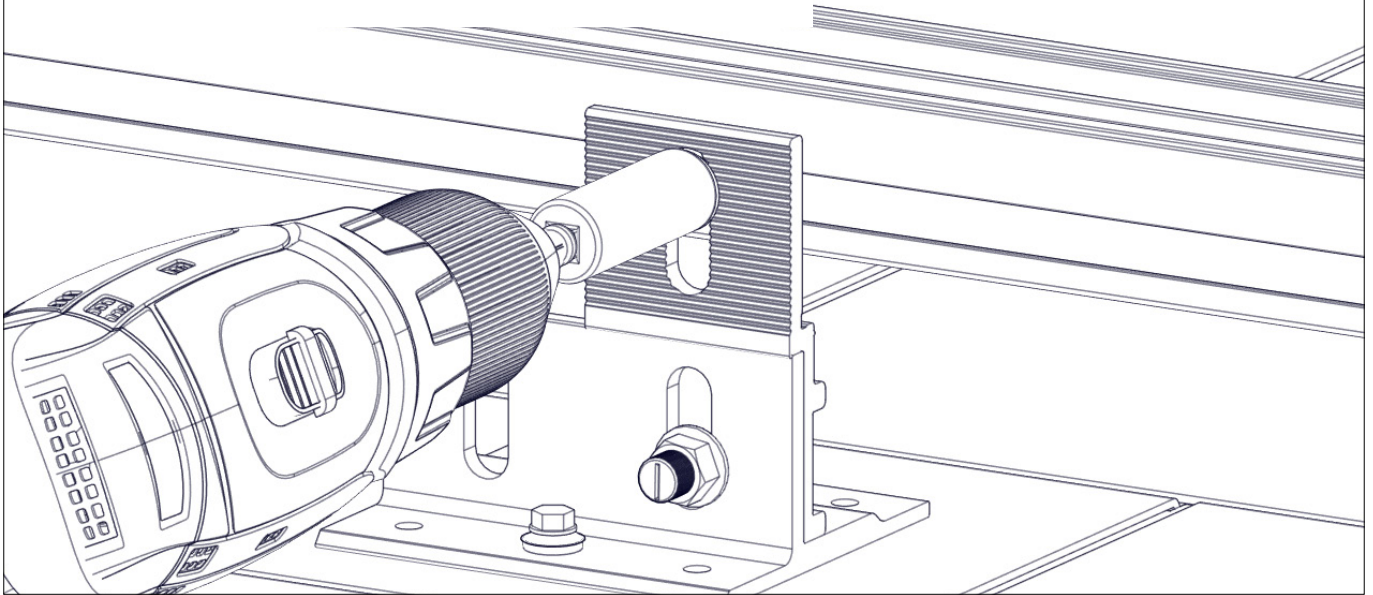



Thank you for choosing a K2 mounting system.

Systems from K2 Systems are quick and easy to install. We hope these instructions have helped. Please contact us with any questions or suggestions for improvement.

Our contact info:

► [k2-systems.com/en-US/contact](https://k2-systems.com/en-US/contact)

► Telephone: +1.760.301.5300

K2 Systems LLC

4665 North Ave Suite I  
Oceanside, CA 92056  
USA

+1.760.301.5300  
[info@k2-systems.com](mailto:info@k2-systems.com)  
[www.k2-systems.com](http://www.k2-systems.com)